

CAT. NO. 18900, PROFESSIONAL RATCHETING TERMINAL CRIMPER TENSION ADJUSTING WHEEL

The crimper is factory set to supply the optimal crimp for insulated terminals. If adjustment of the tool is necessary, please remove the screw holding the adjustment washer. Rotate the washer clockwise for less crimp amount and counter clockwise for more. When finished, reinstall the screw. Care must be taken when making adjustments. Too much pressure can break the dies and too little can create crimp connection issues.



If for any reason the ratchet mechanism needs to be released mid cycle, please press the release lever, located between the handles, forward.

