

Cat. No. 61820 Strut Alignment Level

INSTRUCTIONS

1. Jack up vehicle and secure with jack stands.
2. Remove wheel.
3. Place Strut Alignment Level on brake rotor or spindle.
4. Rotate the Strut Alignment level until the horizontal bubble level is centered.
5. Adjust the screw on the bottom of the level until the vertical bubble level reads "0" degrees (center of gage).
6. Perform necessary repairs to the vehicle. Alignment level can remain on rotor or spindle during repair or it can be removed.
7. After repair, push or pull on strut so that the alignment level returns to the "0" degree mark as set in Step 5.
8. If desired, adjust the camber ("+" or "-") to a different setting.