


CAT. NO. 58000

PARTS BREAKDOWN

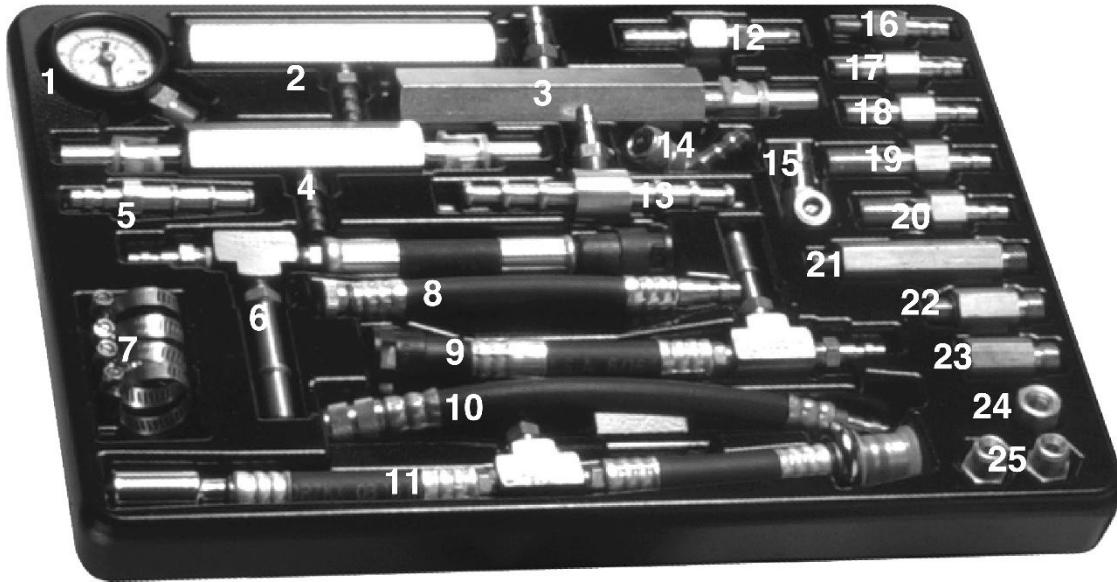

LIFT OUT TRAY

1	33966	0-50 PSI (0-3.5 BAR) Gage	14	58009	90° GM & Chrysler Swivel Adapter
2	57650	GM Throttle Body Injection (TBI) Fuel Pressure Adapter	15	58010	90° Ford Swivel Adapter
3	57660	GM 2.2 Liter Fuel Injection Pressure Test Adapter	16	57200	Honda Fuel Injection Pressure Test Adapter
4	57670	GM 2.5 & 5.7 Liter Quick Connect Fuel Injection Adapter	17	56221	8mm-1.00 Banjo Bolt Adapter
5	53903	Single End Barbed Adapter	18	56224	10mm-1.00 Banjo Bolt Adapter
6	57280	GM & Chrysler 3/8" In-Line Hair Pin Adapter	19	56227	12mm-1.25 Banjo Bolt Adapter
7	33913	Hose Clamps (4 Pieces)	20	56230	12mm-1.50 Banjo Bolt Adapter
8	53850	Small Schrader Valve Test Adapter for Ford	21	33821	12mm-1.50 Male x 8mm -1.00 Male x 3" Adapter
9	57260	Ford 5/16" In-Line Hair Pin Adapter	22	33819	12mm-1.50 Male x 10mm-1.00 Male x 1 9/16" Adapter
10	53908	Large Schrader Valve Test Adapter for GM & Chrysler	23	33822	12mm-1.50 Male x 10mm-1.00 Female x 1 1/4" Adapter
11	57230	Ford In-Line Spring Lock Fitting Adapter	24	33816	12mm-1.50 Male x 8mm-1.00 Female x 15/16" Adapter
12	58112	Volvo 14mm LH-Jetronic Adapter	25	33815	12mm-1.50 Male x 8mm-1.00 Male x 15/16" Adapter with "O" Ring (2 pieces)
13	53788	Double End Barbed Adapter			

LOWER CASE COMPARTMENT

(Not Pictured)

Basic Test Assembly Components			29	58002	CIS Testing Assembly with Ball Valve
26	58240	Gage Assembly	30	56218	5/16" x 3" Hose (2 pieces)
27	53904	48" Hose with Quick Coupler	31	56217	1/4" x 3" Hose (1 piece)
28	36206	6' Amber Bleed-Off Hose	32	58017	Repair Kit (includes seal washers, valve cores, brass depressor and gasket)
			33	58030	Instruction Manual